


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by moving the headlight (1) as necessary.

To move the headlight, loosen the bolt (2).

Tighten the bolt after adjustment.

Obey local laws and regulations.

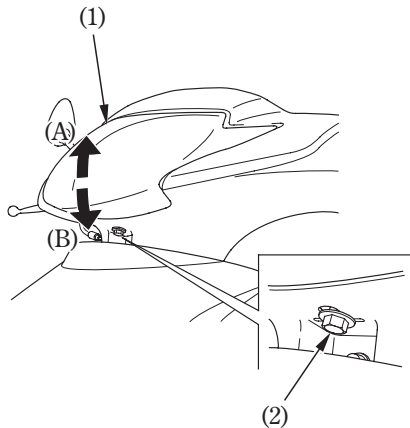

(1) Headlight

(2) Bolt

(A) Up

(B) Down