


3. Rotate the rear wheel. Stop. Check the drive chain slack. Repeat this procedure several times. Drive chain slack should remain constant. If the chain is slack only in certain sections, some links are kinked and binding. Binding and kinking can frequently be eliminated by lubrication.

4. <Except GR type >  
Remove the chain covers (3) by removing the bolts A (4) and bolt B (5).

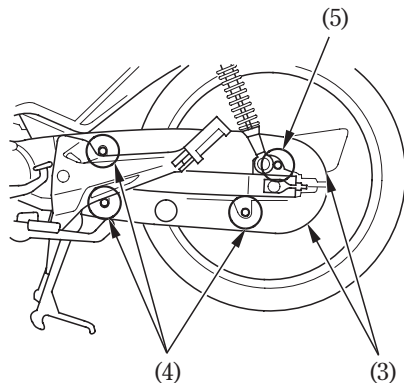

- (3) Chain covers
- (4) Bolts A
- (5) Bolt B