

Front Wheel Installation

1. Install the side collars into the left and right side wheel hub.
2. Position the front wheel between the fork legs and insert the front axle shaft from the right side, through the right fork leg and wheel hub.

When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.

3. Tighten the front axle nut to the specified torque.

Front axle nut torque:

59 N·m (6.0 kgf·m , 44 lbf·ft)

4. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
5. Install the front axle nut cap.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.