


## Position Light Bulb

1. Remove the front handle cover (page 46).
2. Pull out the socket (1).
3. Pull out the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

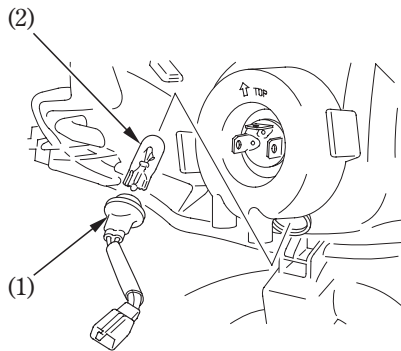

- (1) Socket  
(2) Bulb