

# CONTENTS

	Page		Page
ATC SAFETY . . . . .	1	Tool Kit . . . . .	45
Safe Riding Rules . . . . .	2	Engine Oil and Filter . . . . .	46
Protective Apparel . . . . .	2	Fuel Strainer . . . . .	47
Modifications . . . . .	3	Carburetor . . . . .	48
Post-Ride Cleaning and Inspection . . . . .	3	High Altitude . . . . .	49
Loading and Accessories . . . . .	3	Spark Plug . . . . .	51
DESCRIPTION . . . . .	4	Air Cleaner . . . . .	52
Parts Location . . . . .	4	Valves . . . . .	53
Serial Numbers . . . . .	6	Clutch . . . . .	55
Parts Function . . . . .	7	Air Cleaner Case Drain Tube . . . . .	55
Fuel . . . . .	20	Brakes . . . . .	56
Engine Oil . . . . .	23	Throttle Cable . . . . .	59
Tires . . . . .	25	Final Drive Oil . . . . .	60
Battery . . . . .	27	Engine Under Guard and Skid Plate . . . . .	61
OPERATION . . . . .	28	Spark Arrester . . . . .	62
Pre-Ride Inspection . . . . .	28	STORAGE GUIDE . . . . .	63
Starting the Engine . . . . .	29	TRANSPORTING . . . . .	65
Break-in . . . . .	32	NOISE EMISSION CONTROL SYSTEM . . . . .	69
Riding . . . . .	33	SPECIFICATIONS . . . . .	70
Parking . . . . .	42	WIRING DIAGRAM . . . . .	71
MAINTENANCE . . . . .	43	WARRANTY SERVICE . . . . .	72
Maintenance Schedule . . . . .	43		