
SPARK ARRESTER (USA ONLY)

The exhaust system must be periodically purged of accumulated carbon.

- 1. Remove the spark arrester bolts (1), the muffler lid (2) and gasket (3).
- 2. Start the engine and rev approximately twenty times.

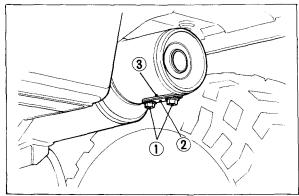

(1) Bolts

(2) Muffler lid

(3) Gasket

W WARNING

- * Do not perform this operation immediately after the engine has been run because the exhaust system becomes very hot.
- * Because of the increased fire hazard ensure that there are no combustible materials in the area when purging the spark arrester.
- * Wear eye protection.
- * Do not stand behind the vehicle while purging the carbon from the spark arrester.
- * Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.
- 3. After clearing the spark arrester of carbon, reinstall the muffler lid and fasteners.