


## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the axle nut (1), and remove the axle (2).
3. Remove the front wheel.

### NOTE:

- \* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

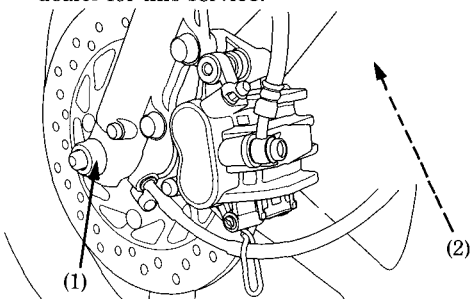

(1) Axle nut (2) Axle


## Installation Note:

To install the front wheel assembly, position the wheel between the fork legs. Insert the front axle from the left side, through the left front fork leg and wheel hub.

Position the lug on the speedometer gear-box against the lug (3) on the left fork leg. Install and tighten the axle nut to the specified torque.

Axle bolt torque:

59 N·m (6.0 kgf·m, 44 lbf·ft)

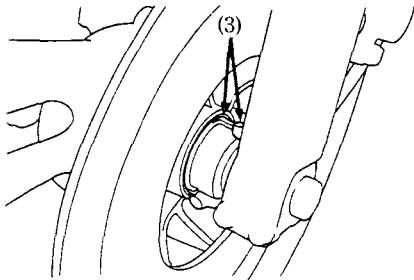

(3) Lugs