


After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

**▲ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

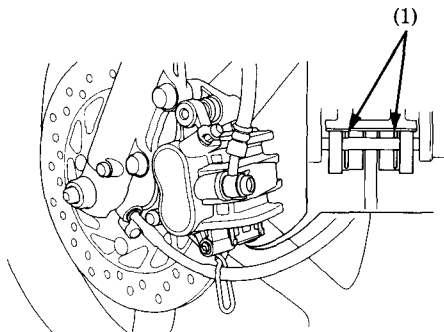

(1) Groove

Brake pad wear will depend upon the severity of usage, type of riding and condition of the roads. The pads will wear faster on dirty and wet roads. Inspect the pads visually during all regular service intervals to determine the pad wear. If either pad wears to the groove (1), both pads must be replaced as a set.

**▲ WARNING**

- \* **Failure to provide adequate disc to caliper holder clearance may damage the brake discs and impair braking efficiency.**