

### Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Tighten and torque the nuts to the specification listed.

Axle nut torque:

59 N•m (6.0 kgf•m, 43 lbf•ft)

Brake stopper arm nut torque:

22 N•m (2.2 kgf•m, 16 lbf•ft)

- Adjust the drive chain (see page 57) and brake (see page 13).
- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

#### **▲ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**