




Electrical Trouble ► Burned-out Light Bulb

License Plate Light

1. Remove the screws.
2. Remove the license light cover.
3. Pull out the bulb without turning.

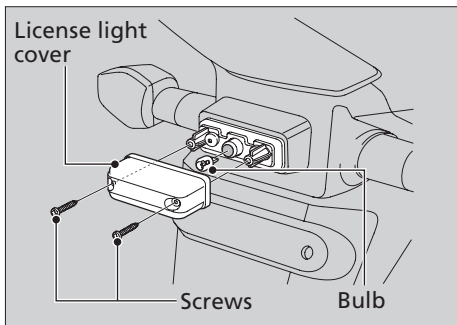

4. Install a new bulb in the reverse order of removal.