

### 3 Backlight brightness adjustment:

You can adjust the brightness to one of three levels.

- 1 Press the **SEL** button. The brightness is switched.



- 2 Press the **SET** button. The backlight is set, and then the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.

### 4 Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can activate or deactivate the automatic reset mode by refuelling after 1st (E) segment of the fuel gauge starts flashing. Deactivation is initially set.

- 1 Press the **SEL** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.



- 2 To end the selection, press the **SET** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the setting of HISS indicator (HISS indicator comes on).