



SEAT


To remove the seat (1), insert the ignition key into the seat lock (2) and turn it clockwise. Pull the seat lock lever (3) downward to unlock the seat. Pull the seat back and up.

To install the seat, put in the hooks (4) under the fuel tank and insert the prong (5) into the fuel tank stay (6).

Push forward and then down on the rear of the seat.

CAUTION:

*** Be sure the seat is locked securely in position after installation.**

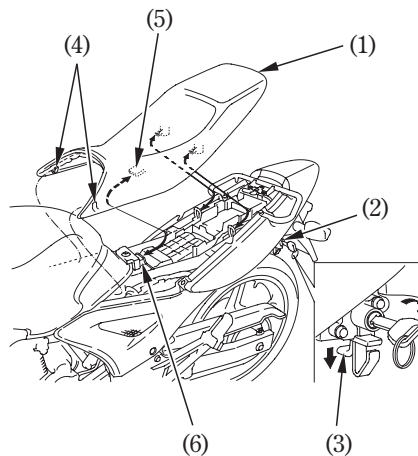

- (1) Seat
- (2) Seat lock
- (3) Lock lever

- (4) Hooks
- (5) Front Prong
- (6) Fuel tank stay

