




Installation Notes:

- Reverse the removal procedure.
- Make sure that the lug (9) on the swingarm (10) is located in the slot (8) in the brake panel.
Rear axle nut torque:
88 N·m (9 kgf·m , 65 lbf·ft)
- Adjust the brake (page 18) and drive chain (page 68).
- Apply the brake several times and check for free wheel rotation after the brake pedal is released.

▲WARNING

*** If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

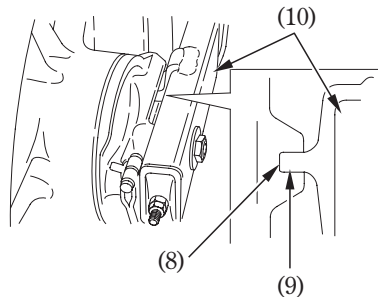

(8) Slot
(9) Lug

(10) Swingarm

