

SEAT

Removing the seat

To remove pillion seat (1), insert the ignition key in the seat lock (2) and turn it clockwise. Pull the seat backwards and lift.


To remove the rider seat(3), unscrew the two socket screws (4), pull the seat backwards and lift.

Fitting the seat

To install the rider seat, insert the two front extensions at the sides under the fuel tank and the central protrusion in the location under the frame cross member. Now fit the two socket screws and tighten them fully.

To install the pillion seat insert the two protrusions in the locations in the rear subframe and press the rear of the seat downwards.

After installing, check that the seat is securely locked in position.

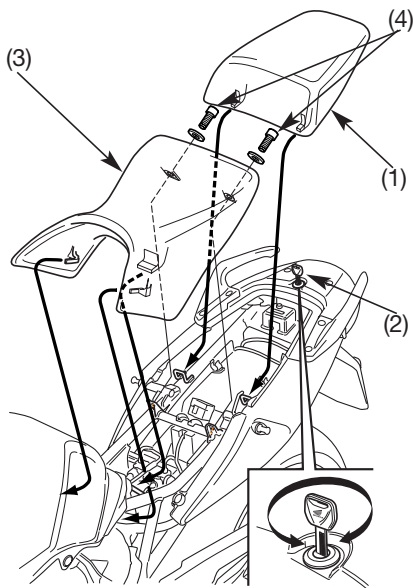

- (1) Pillion seat
- (2) Socket screws
- (3) Rider seat
- (4) Seat lock