


## BRAKE LIGHTS SWITCH ADJUSTMENT

Refer to the Safety Precautions on page 64.

Regularly check the operation of the rear brake light switch (1) on the right side of the engine.

The switch can be adjusted by turning the adjuster nut (2). Turn the nut in direction (A) if operation of the brake light switch is delayed, or in direction (B) if it is anticipated (too sensitive).

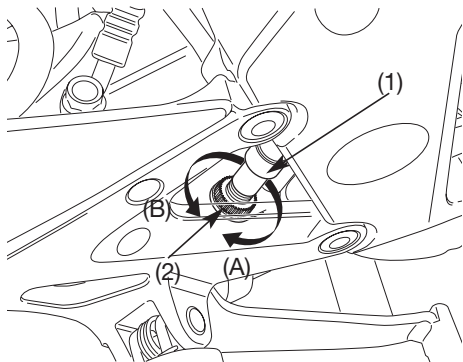

- (1) Brake light switch
- (2) Adjuster nut