



Headlight bulb

1. Remove screws (1) from the headlight housing.
2. Carefully pull headlight (2) forwards and detach connectors (3).

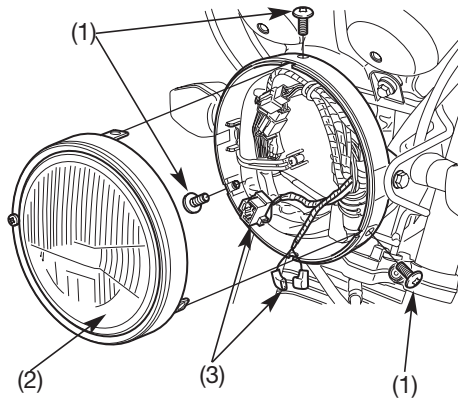

- (1) Screws
(2) Headlight
(3) Connectors

3. Remove dust cover (4).
4. Disengage and lift up headlight bulb retainer clip (5).
5. Remove headlight bulb (6).
6. Replace with a new bulb, following the removal procedure in reverse order.

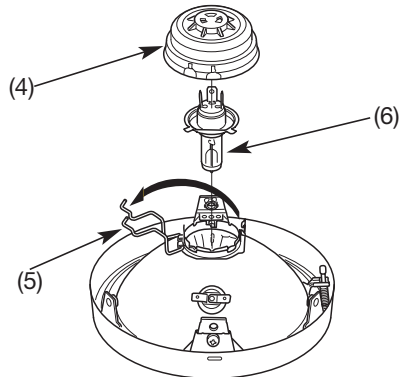

- (4) Dust cover
(5) Clip
(6) Headlight bulb