



- Carefully pull out the upper side of left side cover until the fuel valve is clear and raise the fuel tank until the prop stay (2) is locked.
- Remove the spark plug with a plug wrench (3).

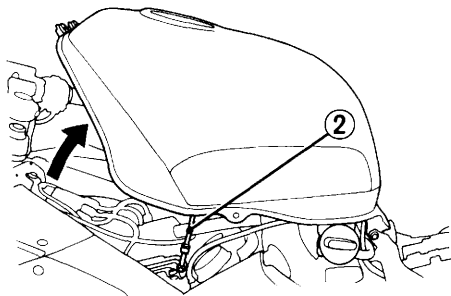

(2) Prop stay

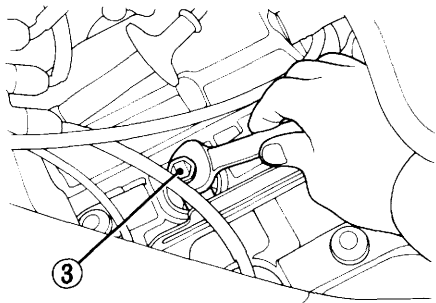

(3) Plug wrench