

## Speed and Mileage Unit Change (E type only)

This function can be operated after the time adjustment mode (page 29).

The speedometer displays either “km/h” or “mph”.


The odometer/tripmeter displays either “km” or “mile”.

Push the RESET button (1) to select “km”/“km/h” or “mile”/“mph”.

To end the selection, turn the ignition switch OFF.

The display will stop flashing automatically if the button is not pressed for about 30 seconds.

As you turn off the ignition switch during the presetting procedures, the preset data just before turning off the ignition switch will be registered.

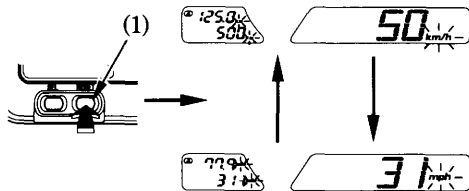

(1) RESET button