

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [ NOTE (1) ]								REFER TO PAGE		
			× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
			MONTH		6	12	18	24	30	36			
DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								109		
DRIVE CHAIN SLIDER					I			I		I	115		
BRAKE FLUID		NOTE (3)			I	I	R	I	I	R	40		
BRAKE PADS WEAR					I	I	I	I	I	I	125		
BRAKE SYSTEM				I		I		I		I	40		
* BRAKE LIGHT SWITCH						I		I		I	—		
* HEADLIGHT AIM						I		I		I	—		
CLUTCH SYSTEM						I		I		I	43		
CLUTCH FLUID		NOTE (3)			I	I	R	I	I	R	43		
** EXHAUST GAS CONTROL VALVE CABLE					EVERY 24,000 km (16,000 mi) I								—
SIDE STAND						I		I		I	117		
* SUSPENSION						I		I		I	116		
* NUTS, BOLTS, FASTENERS					I		I		I		—		
** WHEELS/TYRES						I		I		I	—		
** STEERING HEAD BEARINGS					I		I		I		—		