

### Main Fuse:

The main fuse (1) is located under the front seat.

The specified fuse is:

**30A**

1. Remove the front seat (page 69 ).
2. Lift the starter magnetic switch (2) up slightly.
3. Disconnect the wire connector (3) of the starter magnetic switch.
4. Pull out the old fuse and install a new fuse.  
The spare main fuse (4) is located behind the starter magnetic switch.
5. Reconnect the connector and install the front seat.


### FI Fuse:

The FI fuse (5) is located under the front seat.

The specified fuse is:

**20A**

1. Remove the front seat (page 69 ).
2. Open the FI fuse box cover (6).
3. Pull out the old fuse and install a new fuse.  
The spare fuse is located in the fuse box.
4. Close the FI fuse box cover and install the front seat.

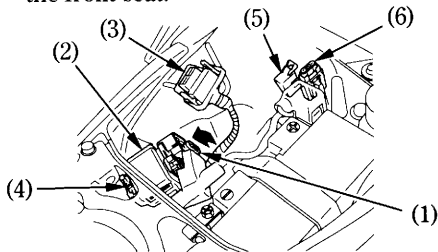

- |                             |                       |
|-----------------------------|-----------------------|
| (1) Main fuse               | (4) Spare main fuse   |
| (2) Starter magnetic switch | (5) FI fuse           |
| (3) Wire connector          | (6) FI fuse box cover |