	FREQUENCY		WHICHEVER →		ODOMETER READING (NOTE (1))							
		COMES		ODOMETER READING [NOTE (I)]								
		FIRST	\times 1,000 km	1	6	12	18	24	30	36	REFER	
		+	× 1,000 mi	0.6	4	8	12	16	20	24	TO	
<u>r</u>	EM	NOTE	MONTH		6	12	18	24	30	36	PAGE	
*	FUEL LINE					I		I		ī	_	
*	THROTTLE OPERATION					I		I		Ī	96	
*	AIR CLEANER	NOTE (2)					R			R		
[SPARK PLUGS			EVERY 24,000 km (16,000 mi) I,					91-95			
				EVERY 48,000 km (32,000 mi) R								
*	VALVE CLEARANCE							I			_	
	ENGINE OIL			R		R		R		R	85-90	
	ENGINE OIL FILTER			R		R		R		R	88-90	
*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	97	
L	RADIATOR COOLANT	NOTE (3)				I		I		R	31 - 32	
*	COOLING SYSTEM					I		I		Ĩ		
*	SECONDARY AIR SUPPLY SYSTEM					I		I		Ī	-	