


Headlight Bulb

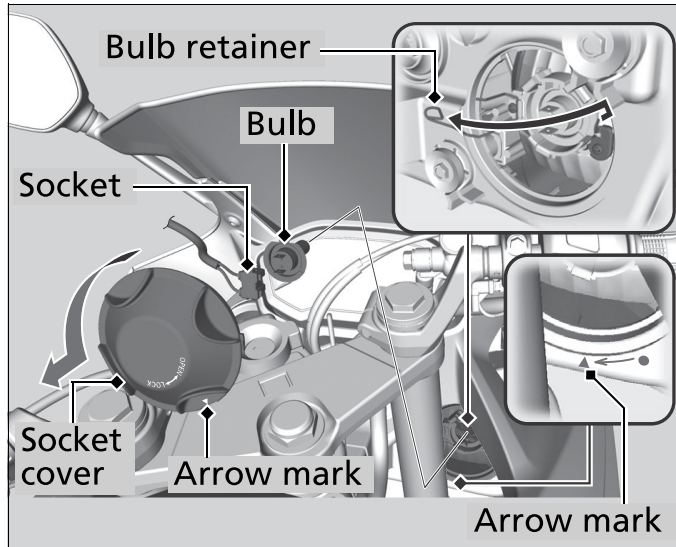

Electrical Trouble ► Burned-out Light Bulb

1. Remove the socket cover by turning it counterclockwise.
2. Pull the socket off the bulb without turning it.
3. Unhook the bulb retainer and pull out the bulb without turning it.
4. Install a new bulb and parts in the reverse order of removal.
► Make sure the arrow marks on the socket cover and headlight housing are aligned.

Troubleshooting

continued 95