

<b>(Ref.No.) Description</b>	<b>Function</b>
(1) Tachometer	Shows engine revolutions per minute. The tachometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(2) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>NOTICE</b></p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(3) Tachometer red zone indicator (yellow)	Flashes when the tachometer needle enter the red zone. Should lights for a few seconds and then go off when the ignition switch is turned ON.