
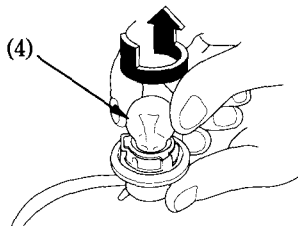


Front Turn Signal Bulb

1. Remove the front turn signal lens (1) by removing the screw (2).
2. Turn the socket (3) 90° counterclockwise and remove it.
3. Slightly press the bulb (4) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

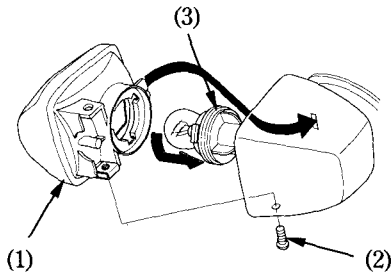

- (1) Lens
(2) Screw

- (3) Socket
(4) Bulb