


## **▲WARNING**

- \* **KEEP OUT OF REACH OF CHILDREN.**
- \* **Even though the battery is sealed, it still vents explosive gases. Do not allow open flames or sparks near the battery.**


### **Battery Removal**

The battery (1) is in the battery box below the seat.

1. Remove both side covers and the seat (page 40, 43).
2. Remove the battery cover (2) by removing the mount bolts (3).
3. Disconnect the negative (-) terminal lead (4) from the battery first, then disconnect the positive (+) terminal lead (5).
4. Pull out the battery from the battery box.

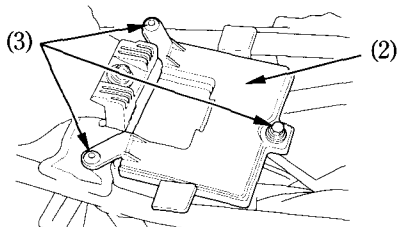

- (1) Battery                      (3) Mount bolts  
(2) Battery cover

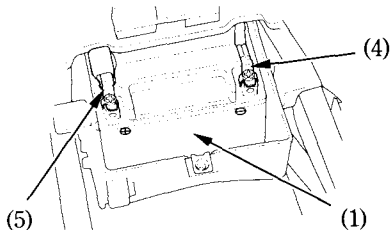

- (4) Negative (-) terminal lead  
(5) Positive (+) terminal lead