

<b>(Ref.No.) Description</b>	<b>Function</b>
(10) High coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. Should also lights for a few seconds and then go off when the ignition switch is turned ON. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 40 – 41 and do not ride the motorcycle until the problem has been corrected.</p> <p><b>NOTICE</b></p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>
(11) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>NOTICE</b></p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p>