

LOWER COWL


The lower cowl must be removed to access the reserve tank and to replace the oil filter.

Removal:

1. Remove the bolts A (1), bolts B (2) and bolt C (3).
2. Remove the lower cowl (4), then pull out the tubes (5).

Installation:

- Installation can be done in the reverse order of removal.
- Through the tubes properly in position.

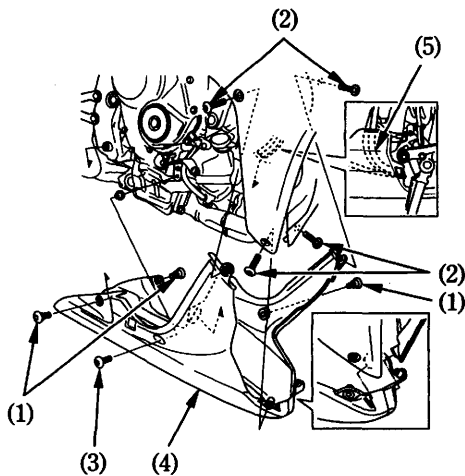

- (1) Bolts A
(2) Bolts B
(3) Bolt C

- (4) Lower cowl
(5) Tubes