


1. Remove the lower cowl (page 68 ).
2. Place a drain pan under the crankcase.
3. To drain the oil, remove the oil filler cap, oil drain bolt (1) and sealing washer (2).

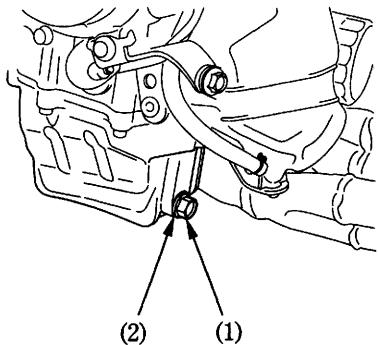

(1) Oil drain bolt

(2) Sealing washer