



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

Engine Oil ► Changing Engine Oil & Filter

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

10. Fill the crankcase with the recommended oil (► P. 50) and install the oil fill cap/dipstick.

Required oil

When changing oil & engine oil filter:

2.9 litres (3.1 US qt, 2.6 Imp qt)

When changing oil only:

2.6 litres (2.7 US qt, 2.3 Imp qt)

11. Check the oil level. ► P. 60
12. Check that there are no oil leaks.