

(Ref.No.) Description	Function
(4) Coolant temperature meter	Shows coolant temperature (page 28). This meter shows the initial display (page 18).
(5) Immobilizer system (HISS) indicator (red)	<p>Except MX , BR type: This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at \odot (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 55).</p> <p>When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 56).</p>