		FREQUENCY	WHICHEVER →		on outputte the transfer of								
1	CO		COMES	COMES		ODOMETER READING [NOTE (1)]							
1			FIRST	\times 1,000 km	1	6	12	18	24	30	36	REFER	
l					0.6	4	8	12	16	20	24	ТО	
II	`EM		NOTE	MONTH		6	12	18	24	30	36	PAGE	
*	FUEL LINE						I		I		1	_	
*	THROTTLE OPERATION						I		I		I	101	
*	AIR CLEANER		NOTE (2)					I			I	91	
	SPARK PLUGS		_		EVERY 24,000 km (16,000 mi) I,					96			
<u> </u>					EVERY 48,000 km (32,000 mi) R								
*	VALVE CLEARANCE								I				
Π.	ENGINE OIL				R	Ĺ	R		R		R	92	
	ENGINE OIL FILTER				R		R		R		R	93	
*	ENGINE IDLE SPEED				I	I	I	I	I	I	I	102	
	RADIATOR COOLANT		NOTE (3)				I		I		R	40	
*	COOLING SYSTEM						I		I		I		
*	SECONDARY AIR SUPPLY	SYSTEM					I		I		Ī		