

Ref. No.	Description	Function
8	High beam indicator (blue)	Lights when the headlight is on high beam.
9	Neutral indicator (green)	Lights when the transmission is in neutral.
10	Overdrive indicator	Lights when the transmission is in Overdrive.