

## FINAL DRIVE OIL

### Oil Level Check


Check the final drive oil level when specified by the maintenance schedule.

1. Place the motorcycle on its center stand on level ground.
2. Remove the oil filler cap (1).
3. Check that the oil reaches a level between the two bosses (2) on the inner housing (visible below the lower edge of the oil cap hole).

#### NOTE:

- \* If the level is low, check for leaks. Pour fresh oil through the oil filler hole until it reaches the lower edge of the opening.

**Recommended Oil: HYPOID GEAR OIL  
SAE 80**

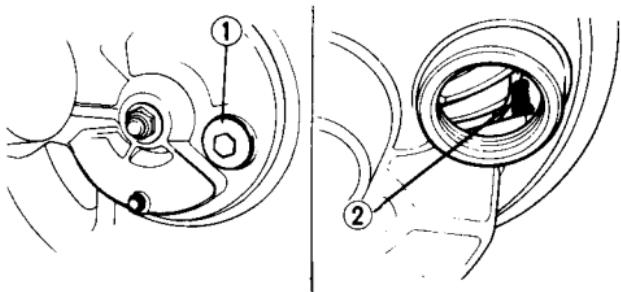

(1) Oil filler cap

(2) Bosses