


BRIEF BOX


The brief box (1) is at the rear of the seat. This owner's manual and other documents should be stored in the brief box. When washing your motorcycle, be careful not to flood this area with water.

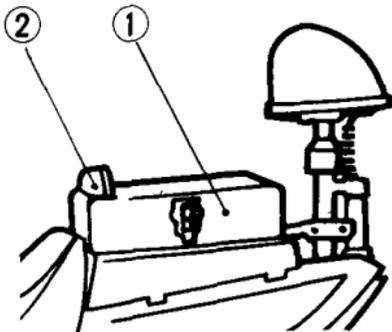

- (1) Brief box
- (2) Brief box lamp

Brief box lamp:

The brief box lamp (2) is located on top of the brief box. This lamp comes on when the switch (3) inside the brief box is set to the "ON" position with the ignition switch in the "P1", "ON", or "P2" position.

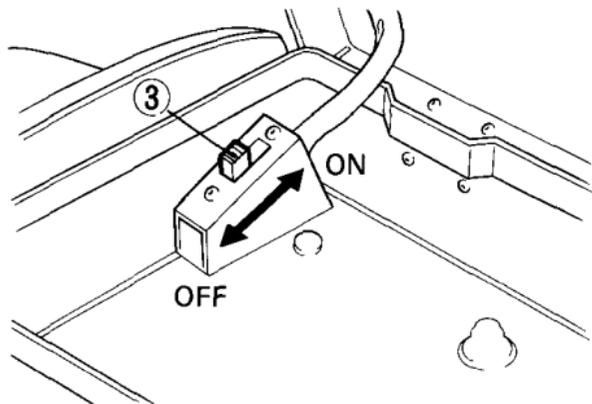

- (3) Brief box lamp switch