

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			→	1	6	12	18	24	30	36	
			× 1,000 km	0.6	4	8	12	16	20	24	
		MONTH		6	12	18	24	30	36		
	FINAL DRIVE OIL				I		I		R	65	
	BATTERY			I	I	I	I	I	I	79-80	
	BRAKE FLUID	(NOTE 5)		I	I	I	I	I	I	17-18	
	BRAKE SHOE/PADS WEAR			I	I	I	I	I	I	77-78	
	BRAKE SYSTEM		I		I		I		I	17-20	
*	BRAKE LIGHT SWITCH				I		I		I	84	
*	HEADLIGHT AIM				I		I		I	—	
	CLUTCH FLUID	(NOTE 5)		I	I	I	I	I	I	21	
	CLUTCH SYSTEM				I		I		I	21	
	SIDE STAND				I		I		I	68	
*	SUSPENSION				I		I		I	68	
*	NUTS, BOLTS, FASTENERS		I		I		I		I	—	
**	WHEELS/TYRES				I		I		I	—	
**	STEERING HEAD BEARINGS		I		I		I		I	—	

\* SHOULD BE SERVICED BY YOUR HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR HONDA DEALER.

Honda recommends that your Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

**NOTES:**

1. At higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in unusually wet or dusty areas.
3. Service more frequently when riding in rain or at full throttle.
4. Thailand type only.
5. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.