


Installation Notes:

- Before installing the rear wheel, check that the wheel hub and final drive gear splines are coated with grease.
- Reverse the removal procedure.
- Be sure the splines on the wheel hub fit into the final gear case.
- Before tightening the axle holding bolt, tighten the axle nut to prevent misalignment.

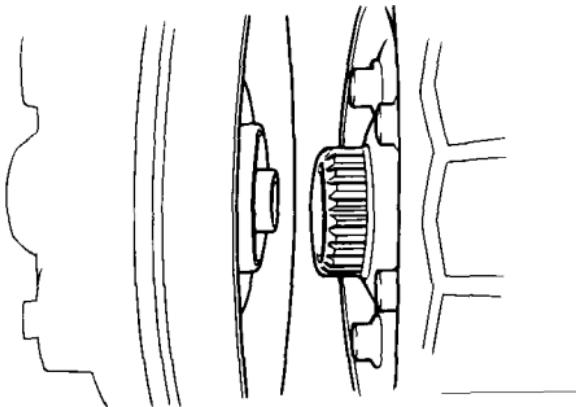

- Tighten and torque the following nuts and bolts:

Axle nut torque:

85 N·m (8.5 kgf·m, 61 ft·lb)

Axle holding bolt torque:

25 N·m (2.5 kgf·m, 18 ft·lb)

Brake stopper arm nut torque:

22 N·m (2.2 kgf·m, 16 ft·lb)

- Apply the brake several times and check for free wheel rotation when released.

WARNING

- * If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

CAUTION:

- * Always replace used cotter pins with new ones.