




AIR CLEANER

Refer to the Safety Precautions on page 55.


The air cleaner should be serviced at regular intervals (page 57). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (page 40).
2. Unlatch the retainer clips (1), and remove the air cleaner housing cover (2).

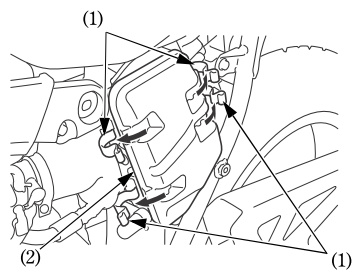

(1) Retainer clips (2) Air cleaner housing cover

3. Unhook the set spring (3), take care to avoid bending the set spring and set spring holder (4).
4. Remove the air cleaner (5).

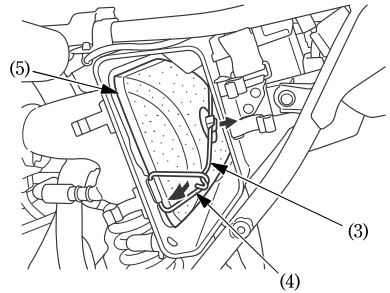

(3) Set spring
 (4) Set spring holder
 (5) Air cleaner

