


9. Clean the inside of the air cleaner housing.
 10. Apply a thin coat of grease to the sealing surface of the air cleaner.
 11. Install the air cleaner assembly by inserting the upper tab (7) on the cleaner into the upper hole (9) in the air cleaner housing, and the lower tab (7) into the lower hole (10).
- Hook the set spring.
- Check that the air cleaner is properly seated.
12. Install the air cleaner housing cover and screws.
 13. Install the right side cover (page 28).

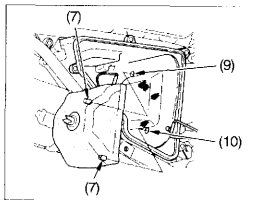

- (7) Tabs
(9) Upper hole
(10) Lower hole


Crankcase Breather

(Refer to the Safety Precautions on page 35.)

Service more frequently if your motorcycle is ridden in the rain or often at full throttle.

Service the breather if you can see deposits in the transparent section of the drain tube.

- Drain the deposits by pinching the plug (1).

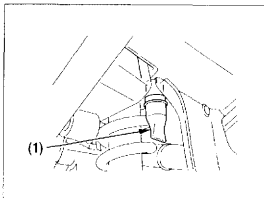

- (1) Crankcase breather plug