

### Battery Removal


The battery (4) is in the battery compartment behind the left side cover.

#### Removal

1. Make sure the ignition switch is OFF.
2. Remove the left side cover (page 28).
3. Remove the battery holder (1).
4. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
5. Pull out the battery (4) from the battery box.

#### Installation

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

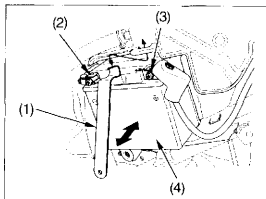

- (1) Battery holder
- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery

### Fuse Replacement

(Refer to the Safety Precautions on page 35.)

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.

#### NOTICE

Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

