


## Cleaning

LEFT SIDE

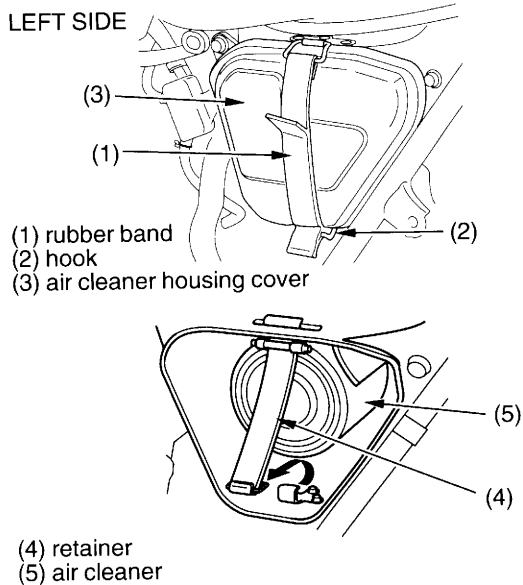

1. Remove the left side cover (page 56).
2. Remove the rubber band ( 1 ) from the hook ( 2 ) and remove the air cleaner housing cover ( 3 ).
3. Unhook the retainer ( 4 ) and remove the air cleaner assembly ( 5 ).
4. Remove the air cleaner from its support. Wipe the support clean.
5. Gently wash the air cleaner in clean, non-flammable (high flash point) solvent such as kerosene — not gasoline. After cleaning, gently squeeze out the remaining solvent. Avoid twisting or wringing the air cleaner. This can tear the foam.
6. Inspect for tears or cracks in the foam or seams of the air cleaner. Replace the air cleaner if it is damaged.
7. Allow the air cleaner to dry thoroughly before applying oil. A wet air cleaner will not fully absorb the oil.

(cont'd)