


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH


The ignition switch (1) is located below the fuel tank.

The ignition switch is used to prevent unauthorized use of the motorcycle. Before riding, insert the key and turn it to the ON position.

After parking the motorcycle, remove the key.

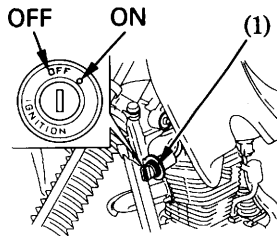

(1) Ignition switch

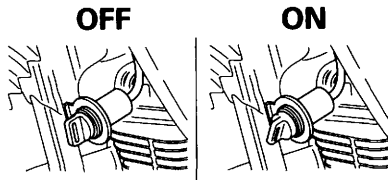

Key Position	Function	Key Removal
OFF	The engine cannot be operated.	Key can be removed
○ (ON)	With the transmission in neutral, the engine can be started.	Key cannot be removed