

---

## SIDE STAND

(Refer to the maintenance precautions on page 61.)

Perform the following maintenance in accordance with the maintenance schedule.

### Functional Check:

- Check the spring for damage or loss of tension and the side stand assembly for freedom of movement.
- Check the ignition out-off system:
  1. Sit astride the motorcycle; put the side stand up and the trasmission in neutral.
  2. Start the engine and with the clutch pulled in, shift the transmission into gear.
  3. Move the side stand fully down.
  4. The engine should stop as you put the side stand down.

If the side stand system does not operate as described, see your authorized Honda dealer for service.

