

PARTS LOCATION

N

Neutral Indicator (green)

Lights when the transmission is in neutral.

OD

Overdrive Indicator

Lights when the transmission is in overdrive (5th gear).



Low Oil Pressure Indicator (red)


Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.

NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

FI

PGM-FI Indicator

Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and the engine stop switch is at  (RUN). If the indicator comes on at any other time, reduce speed and take your motorcycle to a Honda dealer as soon as possible.