
ABS**Anti-lock Brake System (ABS) Indicator**

This light normally comes on when the ignition is turned ON and goes off after starting to ride. If there is an ABS problem, the indicator light comes on and remains on or blinks (page 123).

**CRUISE
ON****CRUISE ON Indicator**

Lights when the cruise control master switch is on.

**CRUISE
SET****CRUISE SET Indicator**

Lights when the cruise control set/decel switch is on.

**High Beam Indicator (blue)**

Lights when the headlight is on high beam.

S**Side Stand Indicator (amber)**

Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 149) is activated.