

MAJOR COMPONENTS


(Information you need to operate this motorcycle)

FUEL

Fuel Tank

The fuel tank capacity including the reserve supply is:
25 l (6.6 US gal, 5.5 Imp gal).

To open the fuel fill cap, insert the ignition key and turn it clockwise to open the fuel filler compartment. Turn the fuel fill cap counterclockwise to remove it.

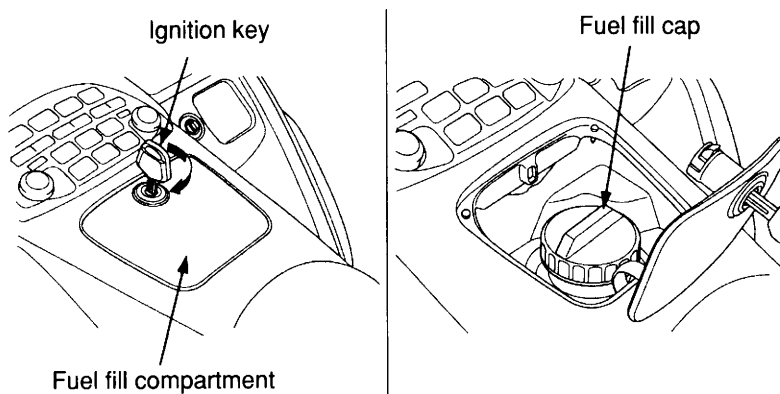

Use unleaded petrol with a research octane number of 91 or higher. The use of leaded petrol will cause premature damage to the catalytic converter.

NOTICE

If “spark knock” or “pinging” occurs at a steady engine speed under normal load, change brands of gasoline. If spark knock or pinging persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.