
ENGINE OIL

Engine Oil Level Check

Check engine oil level each day before operating the motorcycle.

To check the oil level:

1. Place the motorcycle on its center stand on firm and level ground, and remove the right engine side cover (page 136).
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, remove the oil filler cap/dipstick and wipe it clean, then reinsert the dipstick without screwing it in. Remove the dipstick. The oil level should be between the upper and lower marks on the dipstick.
4. If required, add the specified oil up to the upper level mark. Do not overfill.
5. Reinstall the filler cap/dipstick, and the right engine side cover.

NOTICE

Running the engine with insufficient oil can cause serious engine damage.

Oil filler cap/dipstick

