


FEATURES (Not required for operation)

Replacing the Battery:

When the remote transmitter's battery begins to get weak, it may take several pushes on the button to lock or unlock the compartments, and the LED will get dim. Replace the battery as soon as possible.

Battery type: CR2025

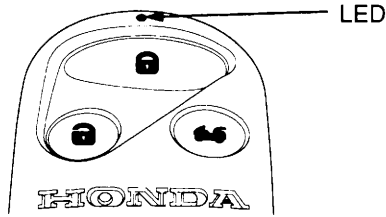

1. Use a coin to turn the round cover on the back of the transmitter counterclockwise.
2. Remove the old battery and note the polarity. Make sure the polarity of the new battery is the same (+ side facing up), then insert it in the transmitter.
3. Align the ∇ mark on the cover with the ⊙ mark on the transmitter, then set the cover in place and turn it clockwise.

