
Cylinder Head Side Cover

Removal

1. Remove the rubber plugs.
2. Remove the bolts.

Installation

- Installation can be done in the reverse order of removal.

