

# MAINTENANCE

---

## SPARK PLUGS

Refer to the Safety Precautions on page 130.

Recommended plugs:

Standard:

BKR6E-11 (NGK) or K20PR-U11 (DENSO)

For cold climate (Below 5°C, 41°F)

BKR5E-11 (NGK) or K16PR-U11 (DENSO)

For extended high speed riding

BKR7E-11 (NGK) or K22PR-U11 (DENSO)

### NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Remove the left and right cylinder head side cover (page 139).
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug caps. Take care to avoid damaging the spark plug wire when disconnecting the caps.
4. Using the spark plug wrench provided in the tool kit, remove the spark plugs.

