

MAINTENANCE

Battery Removal

The battery is located in the battery box behind the left side cover.

1. Remove the left side cover (page 137).
2. Remove the clip and battery plate.
3. Disconnect the negative (-) terminal lead from the battery first.
4. Remove the bolt and open the battery holder.
5. Disconnect the positive (+) terminal lead.
6. Pull the battery out of the battery box.

Be careful to avoid damaging the cover under the battery box when you remove the battery.

